18V ONE+ Cordless 25cm Snow Shovel (Bare Tool) RY18ST25A-0







- 25cm working width makes clearing pathways, decking and porches quick. Easily remove snow to avoid trips or falls!
- Great for light or fresh snow up to 15cm deep. The shovel glides through without manual effort
- Chute snow up to 6m so you can build banks of snow out of the way
- IPX4 rated battery enclosure protects your ONE+ battery when you are caught in heavy snow or rain



Article Number	5133006091
Charger included	No
Clearing depth [cm]	15
Clearing width [cm]	25
EAN Code	4892210223302
No. of batteries supplied	0
Power	18V
Sound power level (Lwa)(dB(A))	83.9
Sound power level uncertainty (dB(A))	3
Sound pressure level (Lpa)(dB(A))	66.6
Sound pressure level uncertainty (dB(A))	3
Supplied in	Recyclable Carton
Throwing distance [m]	6
Vibration level (m/s ²)	1.1
Weight (kg)	7
Weight (without battery) (kg)	7
Weight with battery pack (EPTA) (kg)	7.72 (RB1840X)

